

MANUAL GRIPFACTORY ULTRAGRIP TILES

ATTENTION: The room must be well ventilated.

ATTENTION: Read the safety data sheet before starting.

TOOLS REQUIRED:

- Personal protective equipment (protective gloves and panoramic glasses)
- Watering can, brush, wax coat, vacuum cleaner and / or floor cleaner
- Pressure sprayer with GripFactory **UltraGrip** Tiles (anti-slip liquid for ceramic tiles)
- GripFactory **UltraGrip** Cleaner (cleaning agent)

UITVOERING:

- Clean the floor with **UltraGrip** Cleaner (see manual **UltraGrip** Cleaner).
- Spray the **UltraGrip** Tiles evenly over the floor with a pressure sprayer.
- Spread the **UltraGrip** Tiles over the floor with a wax coat without leaving streaks.
- Allow the **UltraGrip** to work in for around 30-45 minutes without the floor drying. If there are dry spots, spread the liquid with the wax coat or spray the liquid.
- Test after 30 minutes whether the floor's roughness is sufficient. For a higher skid resistance, let the liquid work in even longer.
- If the floor is sufficiently rough, neutralize with water and scrub the floor thoroughly.
- Dry the floor afterwards with the vacuum cleaner or floor extractor.


TIPS:

- Always first make a test surface out of sight so that the effect of the anti-slip treatment is known.
- Beware of dark floors because of the "whitening" effect.
- Make sure the floor heating is off and prevent drafts as much as possible.
- Never treat more than 100 m² per session to achieve the correct skid resistance everywhere.




GripFactory B.V.

Industrieweg 4 H
3442 AE Woerden
The Netherlands

 +31 (0)348 - 20 30 00

 info@gripfactory.nl

 www.gripfactoryantislip.com

GRIPFACTORY APPLICATION SERVICE

Problems, issues? Then contact the GripFactory Service Desk (+31 348 203000). For an additional cost you can have GripFactory UltraGrip applied by a certified applicator.