

## MANUAL GRIPFACTORY SANIGRIP REMOVER

### TYPE

GripFactory SaniGrip Remover is suitable for removing GripFactory SaniGrip from almost all surfaces. It contains no acids, leaches, hazardous solvents (such as NMP) or preservatives.

### CHARACTERISTICS

GripFactory SaniGrip Remover is water-based and eco-friendly, it is lye-free and acid-free and therefore pH-neutral. This Remover is non-flammable, rinsable with water and has almost no evaporation. Large surfaces can be cleaned with one treatment.

### PROCESSING

GripFactory SaniGrip Remover requires no pre-processing or post-processing. GripFactory SaniGrip Remover can be used on almost any type of surface. Proper use will not damage the surface. Wood, stone, marble, etc. will not discolour and almost all types of plastic will not be affected. Metals can be affected. The correct exposure time is essential. The longer the Remover remains, the deeper it will penetrate into the top layer and (ultimately) into the lower levels.

**TIP:** Always try to remove a small part as a test first.


- Spray GripFactory SaniGrip Remover on the area to be cleaned;
- Leave on for around 30 - 50 minutes;
- Remove GripFactory SaniGrip with a stiff brush, spatula, water (possibly high pressure), a cloth or a cleaning cloth;
- Do not use steel wool for removal, as this may result in rust formation;
- A stainless steel sponge is suitable. We always recommend the treatment of a test area;
- The exposure time may be longer for more porous surfaces.

### PRECAUTIONARY MEASURES

GripFactory SaniGrip Remover is completely safe for people and the environment. It does not cause harmful fumes. It is safe to use for professionals and DIY. No special precautions are needed, it can be used indoors and outdoors. Always wear suitable personal protective equipment.

### HANDLING

The removed material must be disposed of in accordance with local regulations.

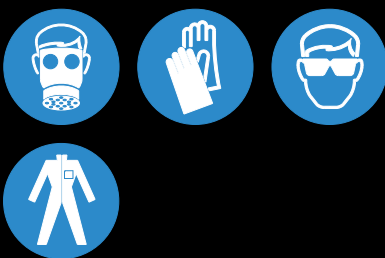


GripFactory B.V.

Trasmolenlaan 12  
3447 GZ Woerden  
The Netherlands




☎ +31 (0)348 - 20 30 00  
✉ info@gripfactory.nl  
🌐 www.gripfactoryantislip.com

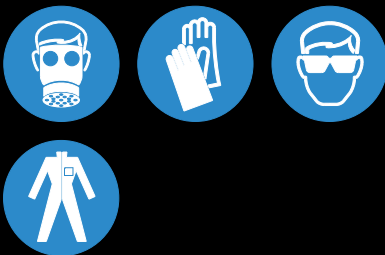The information in this datasheet is given to the best of our knowledge based on laboratory tests & practical experience, but if the product is often used under conditions beyond our control, we cannot guarantee anything but the quality of the product itself. We reserve the right to change the information provided without prior notice.



GripFactory B.V.

Trasmolenlaan 12  
3447 GZ Woerden  
The Netherlands

 +31 (0)348 - 20 30 00  
 [info@gripfactory.nl](mailto:info@gripfactory.nl)  
 [www.gripfactoryantislip.com](http://www.gripfactoryantislip.com)

#### GRIPFACTORY APPLICATION SERVICE

Are you unable to find a solution or do you have questions? Then contact the GripFactory Service Desk (0348-203000). For an additional cost you can have GripFactory SaniGrip Remover applied by a certified applicator..